



TAPAS TOBERA PARA - INJECTOR COVERS FOR - WASSERKÜHLERABDECKUNGEN FÜR BMW R1200GS LC / R1250GS

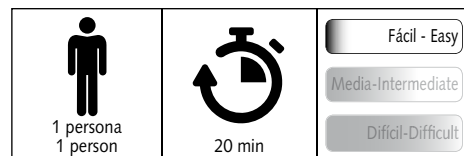

Ref.: 9175

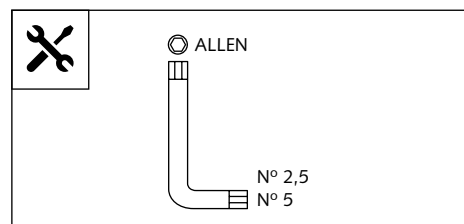


ID	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF.
1		Tapa derecha	Right cover	1	9175IM3
2		Tapa izquierda	Left cover	1	9175IM3
3		Soporte derecho modelo R1200GS'17 / R1250GS	Model R1200GS '17 / R1250GS right support	1	SOPOR-4P-5-9175
4		Soporte izquierdo modelo R1200GS'17 / R1250GS	Model R1200GS '17 / R1250GS left support	1	SOPOR-4P-5-9175
5		Soporte derecho modelo R1200GS '13-'16	Model R1200GS '13-'16 right support	1	SOPOR-4P-5-9175
6		Soporte izquierdo modelo R1200GS '13-'16	Model R1200GS '13-'16 left support	1	SOPOR-4P-5-9175
7		Tornillo Allen DIN912 M6x35	M6x35 DIN912 Allen screw	2	TORNI-D912--447
8		Tornillo Allen ISO 7380 M4x10 NEGRO	M4x10 ISO7380 Inox Allen screw BLACK	4	TORNI-I7380_753
9		Arandela de nylon M4x0,5	M4x0,5 nylon washer	4	ARNV00000000311



TAPAS TOBERA PARA - INJECTOR COVERS FOR - WASSERKÜHLERABDECKUNGEN FÜR
BMW
R1200GS LC / R1250GS

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

MONTAJE LADO DERECHO
 RIGHT SIDE ASSEMBLY

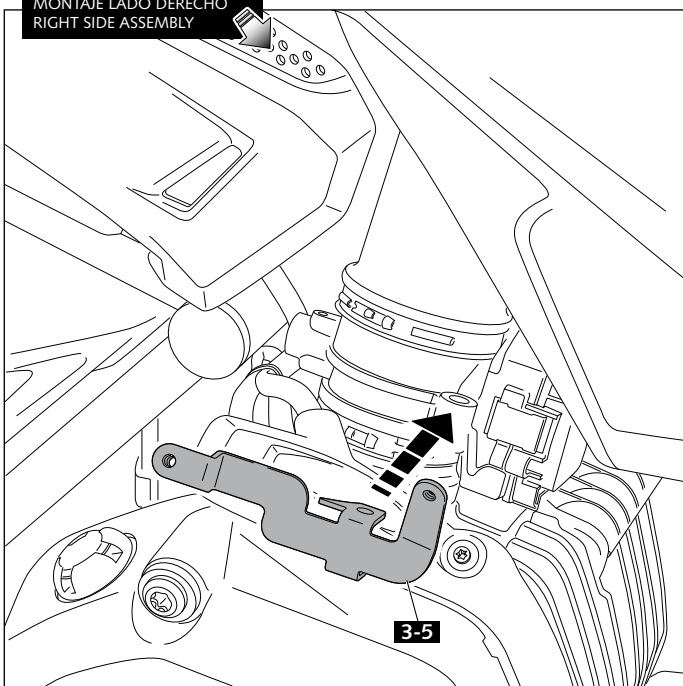


MODELO R1250GS '17 / R1250GS
 MODEL R1250GS '17 / R1250GS

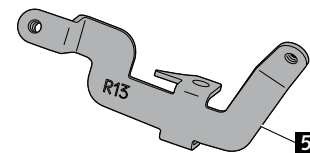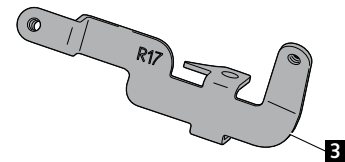

MODELO R1200GS '13-'16
 MODEL R1200GS '13-'16


1

MONTAJE LADO DERECHO
 RIGHT SIDE ASSEMBLY

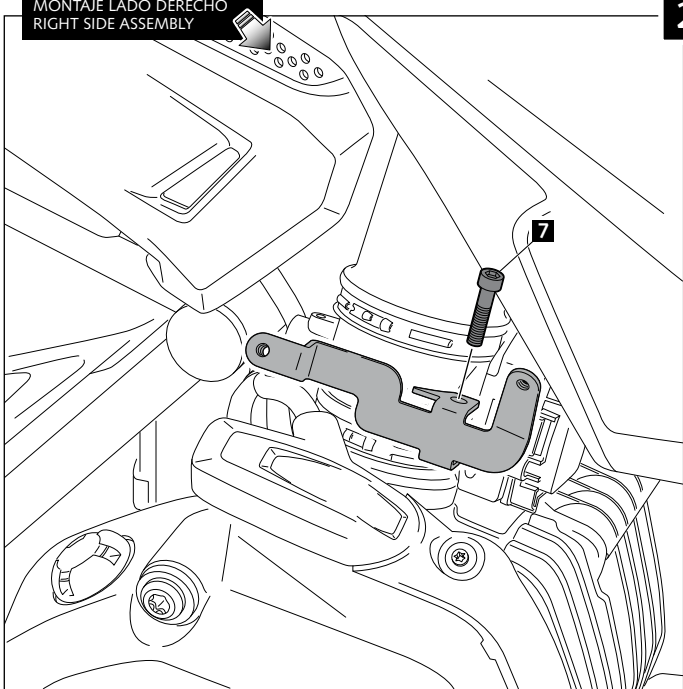

2

MONTAJE LADO DERECHO
 RIGHT SIDE ASSEMBLY

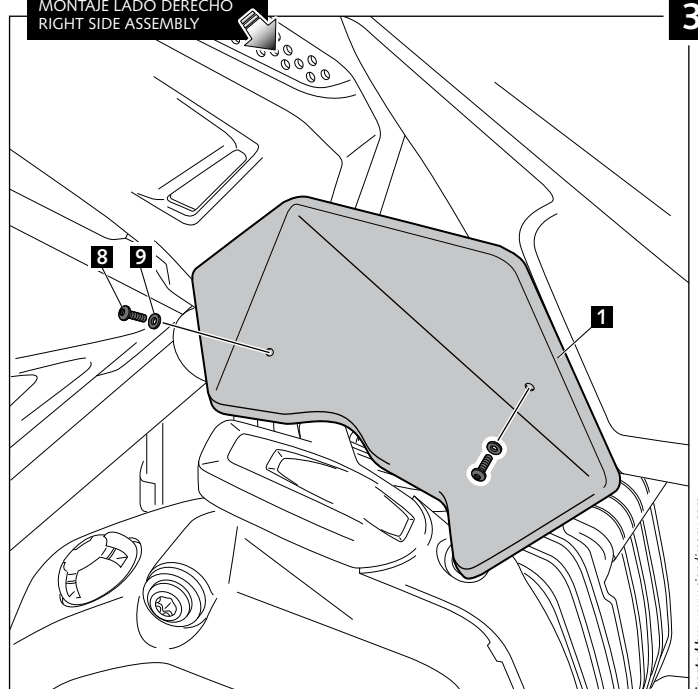

3

TAPAS TOBERA PARA - INJECTOR COVERS FOR - WASSERKÜHLERABDECKUNGEN FÜR
BMW
R1200GS LC / R1250GS

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

