

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com










www.puig.tv - www.puigusa.com

Ref.: 7513J

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

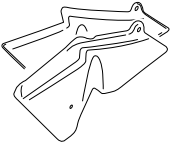TAPAS LATERALES PARA - INFILL PANELS FOR - SEITENVERKLEIDUNGEN FÜR KTM 1050/1190 ADVENTURE/1290 SUPERADVENTURE



ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.
1		Juego de tapas laterales	Infill panels	1
2		Soporte metálico derecho superior	Upper Right metal Support	1
3		Soporte metálico derecho inferior	Lower Right metal Support	1
4		Soporte metálico izquierdo superior	Upper Left metal Support	1
5		Soporte metálico izquierdo inferior	Lower Left metal Support	1
6		Tornillo M6x35 ISO 7380 (negro)	M6x35 ISO 7385 (black) Allen screw	2
7		Silentblock M5	Silentblock M5	4
8		Arandela nylon M5x0,5	M5x0,5 nylon washer	4
9		Tornillo M5x16 ISO 7380 (negro)	M5x16 ISO 7380 (black) Allen screw	4

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN





Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

www.puig.tv - www.puigusa.com

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

TAPAS laterales para - INFILL PANELS FOR - SEITENVERKLEIDUNGEN FÜR KTM 1050/1190 ADVENTURE/1290 SUPERADVENTURE

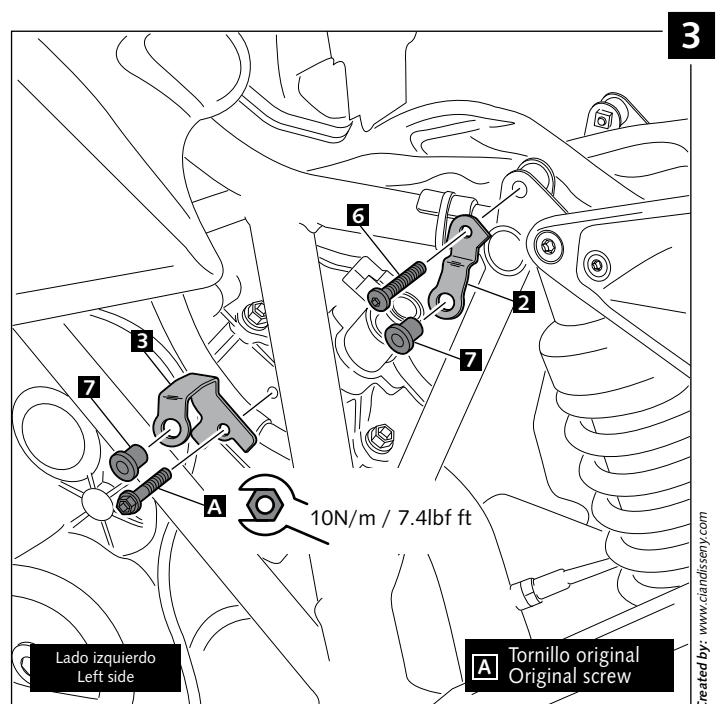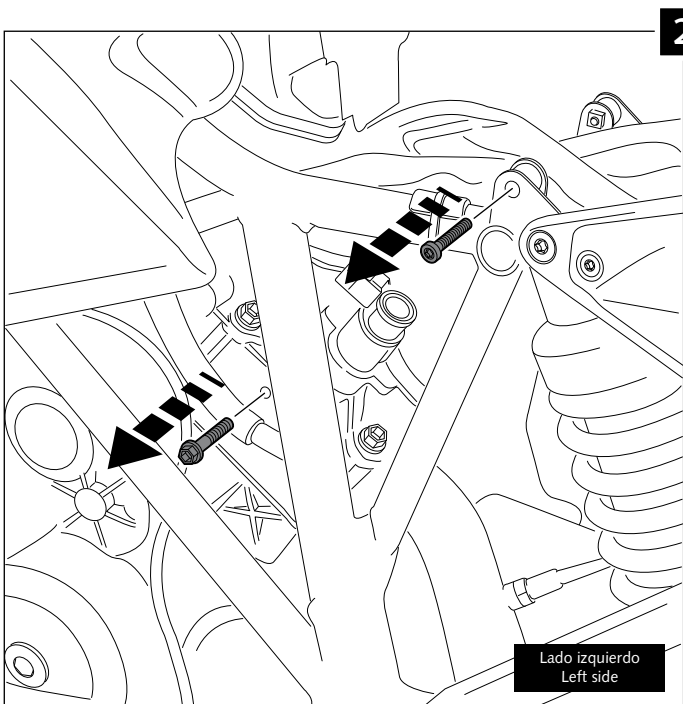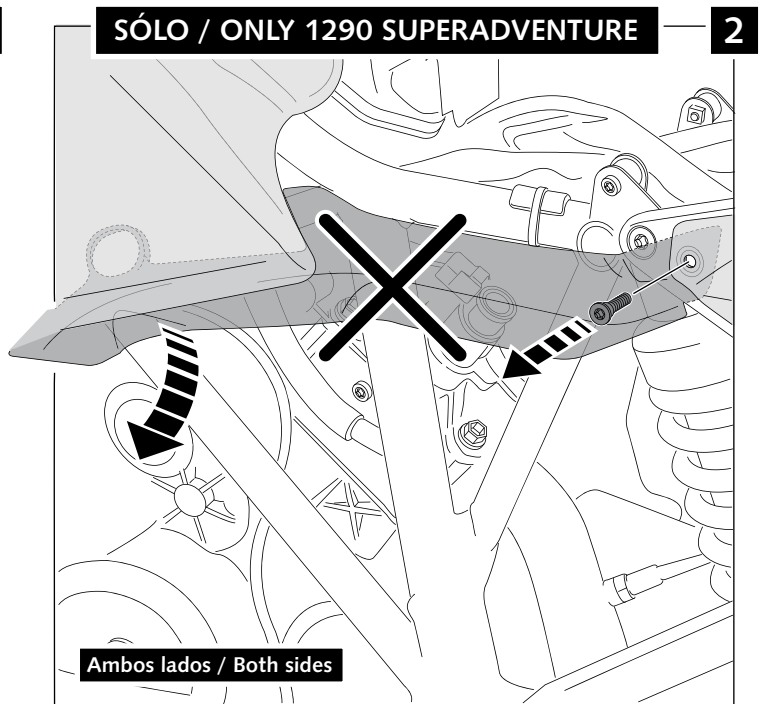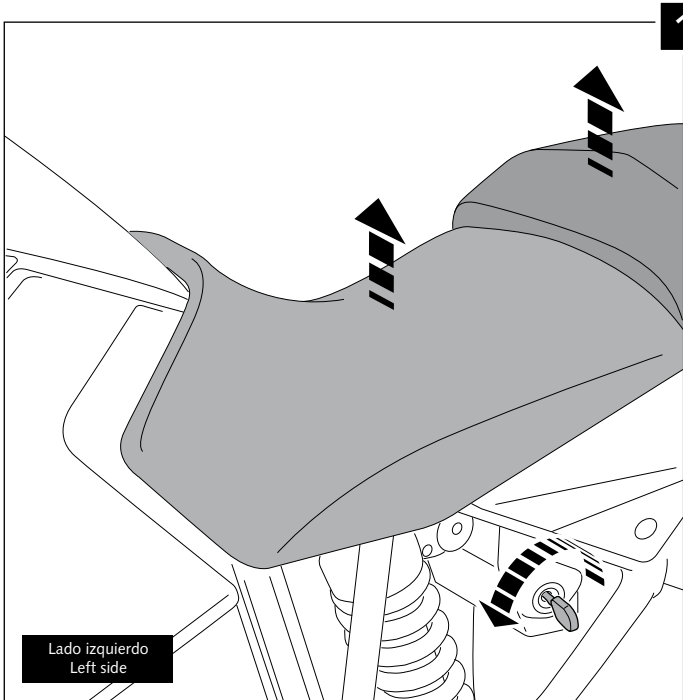

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

www.puig.tv - www.puigusa.com

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

TAPAS LATERALES PARA - INFILL PANELS FOR - SEITENVERKLEIDUNGEN FÜR KTM 1050/1190 ADVENTURE/1290 SUPERADVENTURE

