


# SHAD

HONDA CB 650 F '14  
H0CF64IF

**3P**  
SYSTEM

DESIGNED IN  
BARCELONA

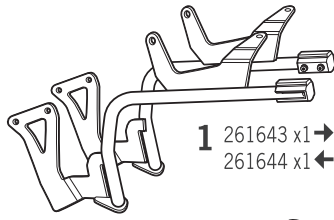

**1** 261643 x1 →  
261644 x1 ←



**2** 260760 x2  
Ø20 Ø11 x 16



**3** 303025 x 2  
Ø10



**4** 304209 x2  
M10 x 45



**5** 260417 x2  
Ø16 Ø9 x 16



**6** 303020 x6  
Ø8



**7** 304036 x2  
M8 x 45 DIN 7380



**8** 304272 x4  
M8 x 35 Din 7380

## ! WARNING!

**(GB)**

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**(E)**

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**(D)**

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**(I)**

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**(F)**

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

