


# SHAD

KAWASAKI VERSYS 600/650 15  
K0VR65iF

**3P**  
SYSTEM

DESIGNED IN  
BARCELONA

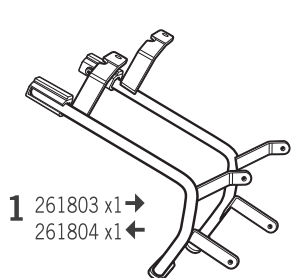

2 260807 x2  
Ø15 M8 x 19



3 260808 x2  
Ø15 Ø11 x 20



4 303027 x2  
Ø8



5 304039 x4  
M8 x 40 Din 7380



6 304028 x2  
M8 x 25 DIN 7380



7 303045 x8  
Ø8



8 302024 x2  
M8



9 303018 x2  
Ø8

## ! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

