

Item number: HTA.06.089.11000

Revision: 01 · Date: 12 - 2025

SLC side carrier right

⌚ ~ 1 h.

EASY  DIFFICULT

ENGLISH ·Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

SAFETY WARNING SYMBOL

 **This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:**

▲ DANGER: Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

▲ WARNING: Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

▲ CAUTION: Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

▲ NOTE: Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION

▲ WARNING: Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

▲ WARNING: If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

PREPARATION: Read the mounting instructions carefully and make sure that all parts on the parts list are available.

▲ CAUTION: Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

ASSEMBLY: All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

▲ WARNING: Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

▲ DANGER: Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK: After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

▲ WARNING: Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



SW-MOTECH GmbH & Co. KG
Ernteweg 7-10
35282 Rauschenberg
Germany



info@sw-motech.com
www.sw-motech.com

LEGEND OVERVIEW • READ AND KEEP MOUNTING INSTRUCTIONS!



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



Use thread locker: Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:
www.sw-motech.com




Tighten/note the tightening torque information: Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).

PARTS LIST - READ AND KEEP MOUNTING INSTRUCTIONS!

4



HTA.06.089.003.11

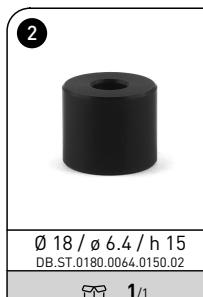

$\varnothing 18 / \varnothing 6.4 / h 15$
DB.ST.0180.0064.0150.02

1/1

1/1

5



HTA.06.089.902.01.11



M6 x 25; ISO 7380
SC.ST.06.025.01.7380.109

1/1

1/1



M6 x 40; ISO 7380
SC.ST.06.040.01.7380.109

1/1



M8 x 30; DIN 6912
SC.ST.08.030.01.6912.088

1/1



$\varnothing 8.4$; DIN 9021
US.ST.084.01.9021.300

1/1

6



HTA.00.152.080.35

3/3



HTA.00.152.081.00

1/1



M6 x 20; DIN 6912
SC.ST.06.020.01.6912.088

1/1




M6 x 20; DIN 7991
SC.ST.06.020.48.7991.109

2/2

MOUNTING STEP • READ AND KEEP MOUNTING INSTRUCTIONS!

1

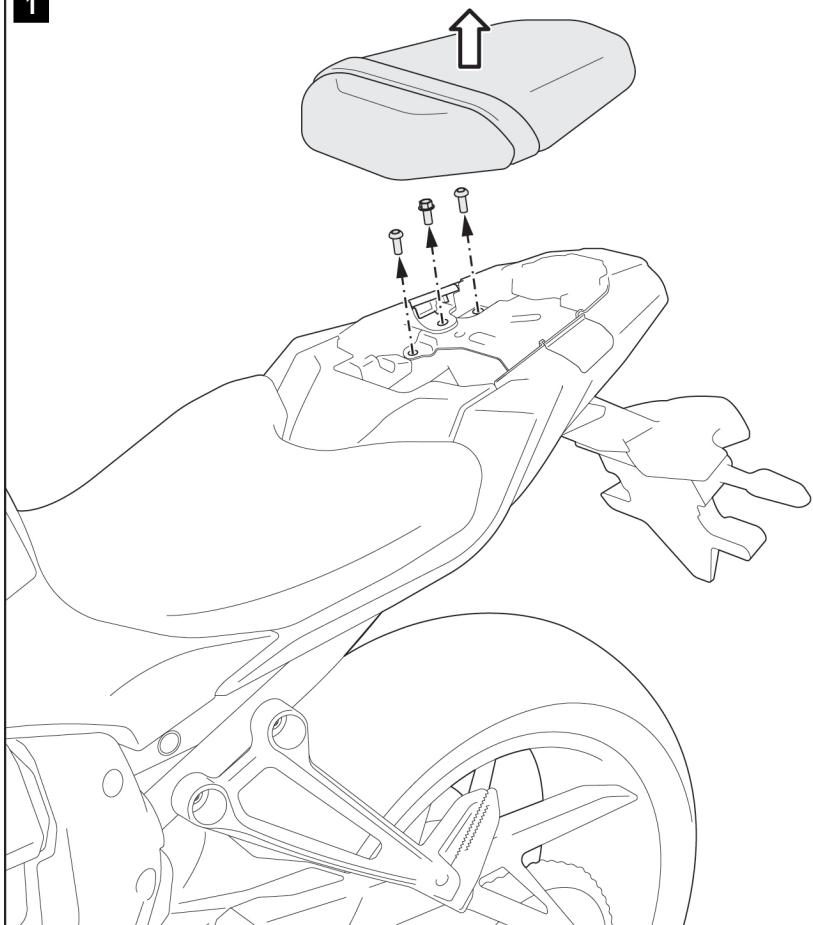


⚠ WARNING: Always wear eye and hand protection!
⚠ WARNING: Always use the proper tools!

Remove the passenger seat and the original screws from the vehicle.




2

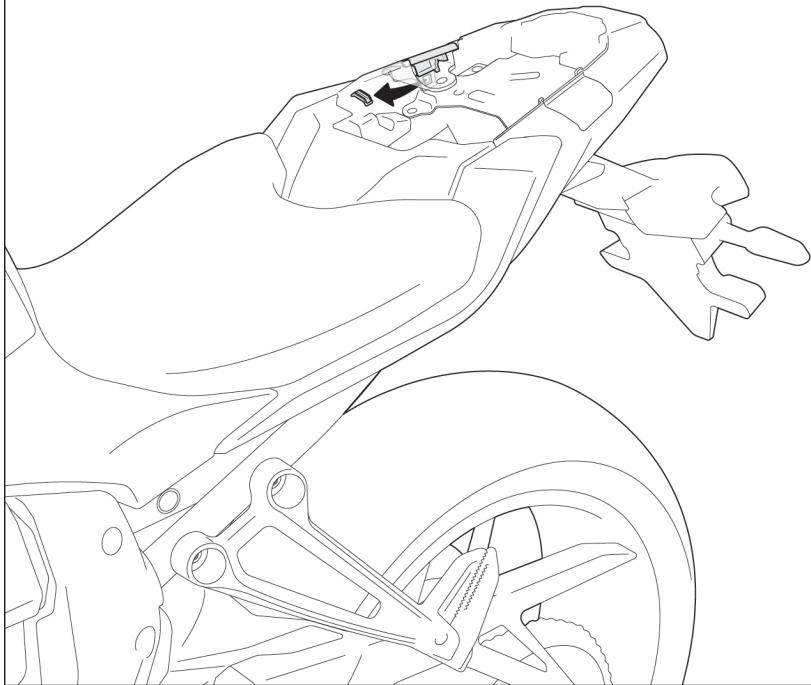

⚠ NOTE: Disassembly of the plastic clip is complicated. It is therefore recommended that assembly is carried out by a qualified and certified bicycle workshop.


Remove the plastic clip from the **right** side of the rear panel.

3

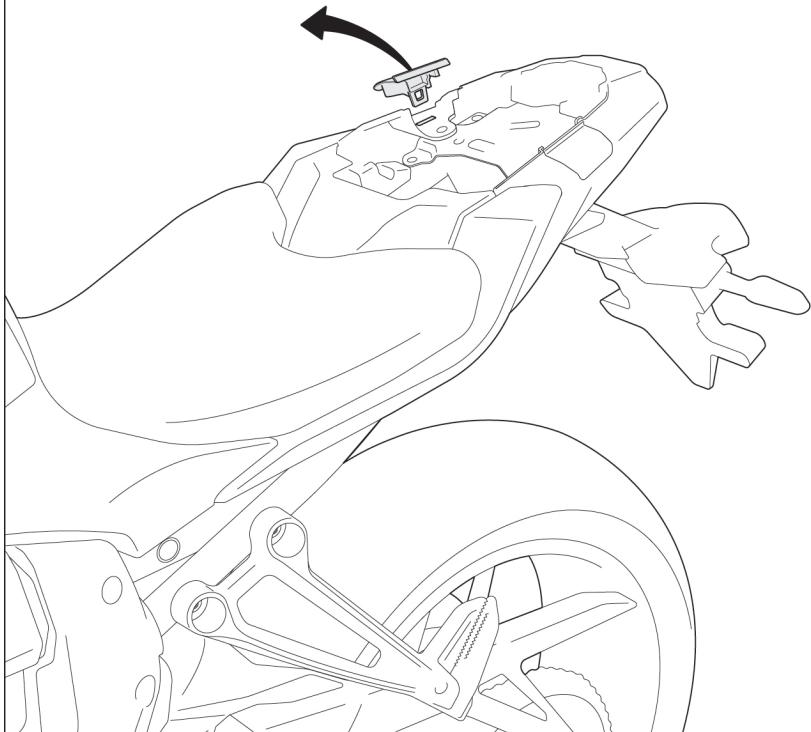

Remove the fairing from the **right** side of the vehicle.



4

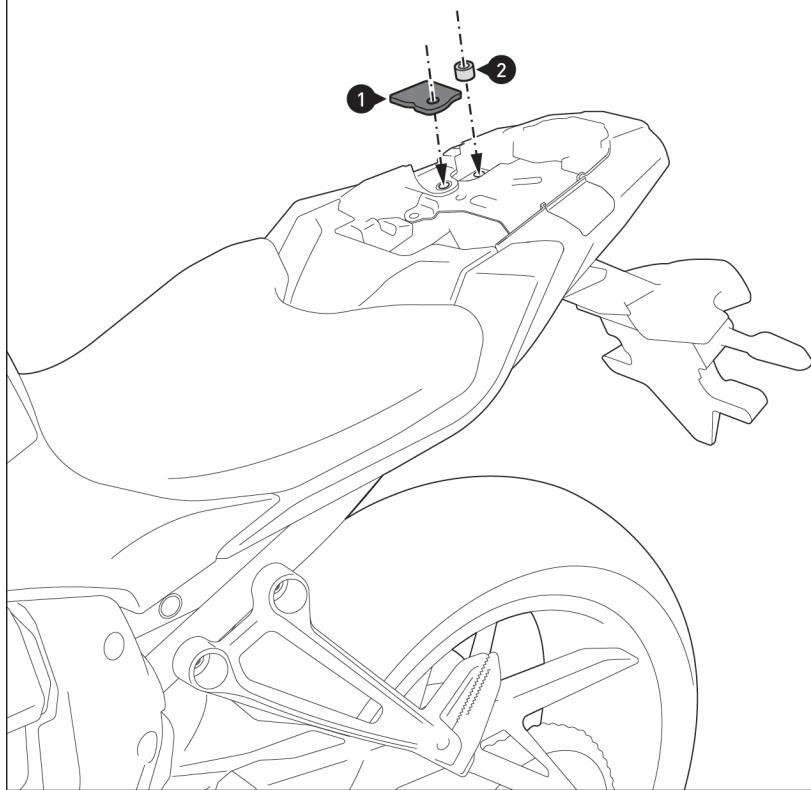

Place the mounting bracket (1) on the middle mounting point and the spacer (2) on the rear mounting point of the vehicle frame.



5

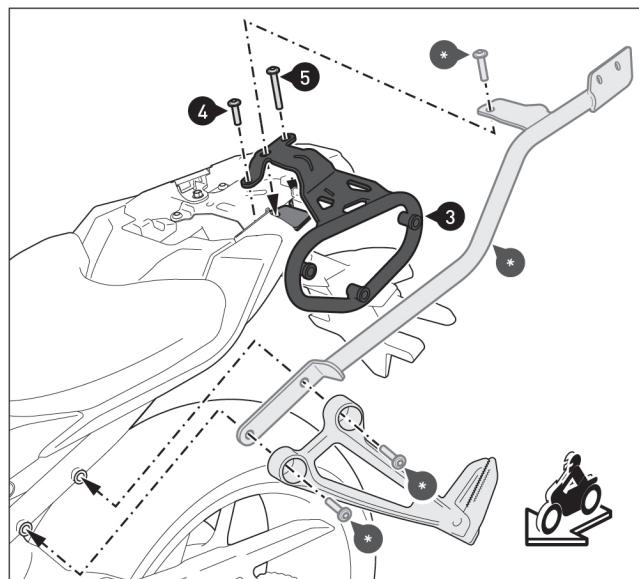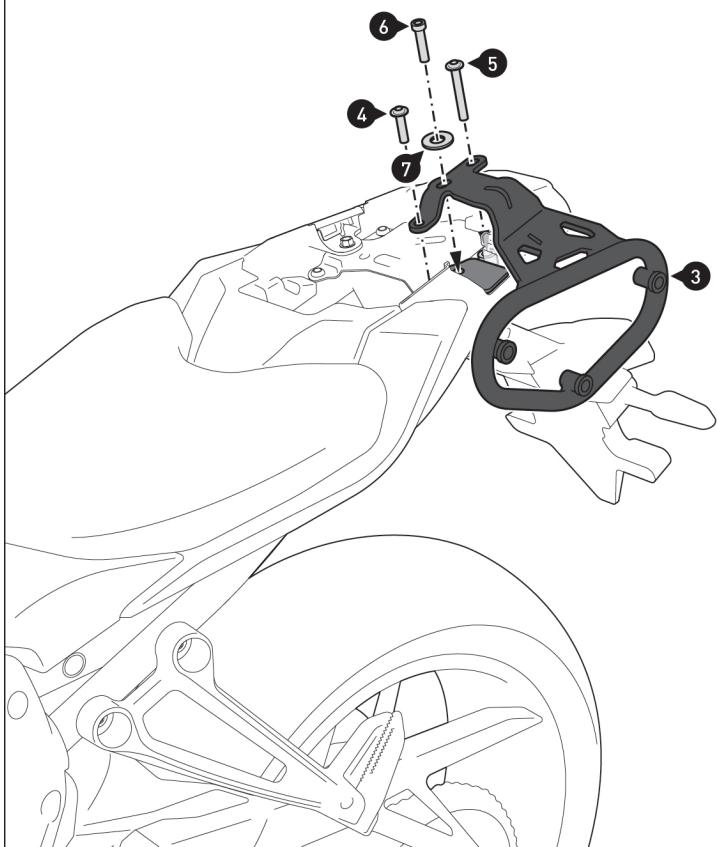


⚠ NOTE: The following assembly steps show the assembly of the left side carrier. Install the right side carrier in the same way.

⚠ NOTE: When installing at the same time as the SW-MOTECH rack (*), screw the parts together as shown in the detailed drawing. The screws (6) and the washer (7) are no longer required. Instead, mount the screws (*) included with the rack.


Screw the side carrier (3) to the rear of the vehicle.

⚠ WARNING: Use liquid threadlocker!

Tighten screws (4), (5) and (6) according to the vehicle manufacturer's specifications.

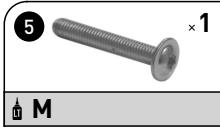


6

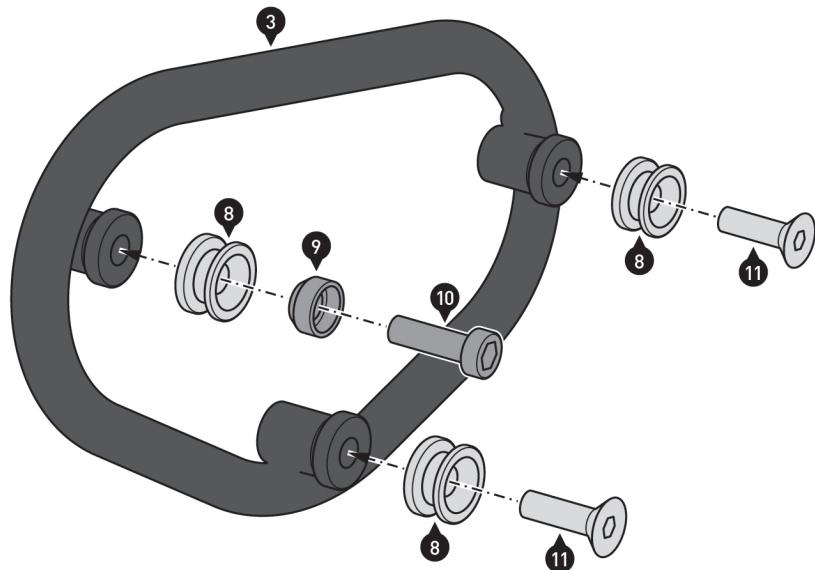

Screw parts (9) to (12) onto the side carrier (3).

⚠ WARNING: Use liquid threadlocker!

Tighten the screws (11) and (12) as specified in the mounting instructions.

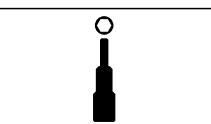

PRODUCT-SPECIFIC NOTES

⚠ NOTE :Observe the country-specific regulations for the registration/operation of your vehicle and any applicable TÜV regulations. Have any parts requiring registration entered into your vehicle documents by your inspection centre after they have been installed.