


Item number: **KFT.06.020.30000/B**Revision: **00** • Date: **11 - 2025****PRO side carrier** ~ 0.75 h.EASY     DIFFICULT

**ENGLISH** Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.


This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.


These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.


**SAFETY WARNING SYMBOL**

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words **DANGER**, **WARNING** or **CAUTION** are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

**GENERAL INFORMATION**


 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.


 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

**PREPARATION:** Read the mounting instructions carefully and make sure that all parts on the parts list are available.

 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

**ASSEMBLY:** All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

**FUNCTIONAL CHECK:** After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



**SW-MOTECH GmbH & Co. KG**  
Ernteweg 7-10  
35282 Rauschenberg  
Germany



 [info@sw-motech.com](mailto:info@sw-motech.com)  
 [www.sw-motech.com](http://www.sw-motech.com)



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:  
**[www.sw-motech.com](http://www.sw-motech.com)**




**Use thread locker:** Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.



**Tighten/note the tightening torque information:** Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).

**PARTS LIST • READ AND KEEP MOUNTING INSTRUCTIONS!**

2	<div data-bbox="148 145 359 369"> <div>1</div>  </div> <div data-bbox="148 369 359 454"> <div>KFT.06.020.003.11</div> <div> 2/2</div> </div>	<div data-bbox="359 145 585 369"> <div>2</div>  </div> <div data-bbox="359 369 585 454"> <div>KFT.06.020.002.11</div> <div> 2/2</div> </div>	<div data-bbox="585 145 812 369"> <div>3</div>  </div> <div data-bbox="585 369 812 454"> <div>M10 x 45; DIN 912 SC.ST.10.045.01.912F.088</div> <div> 4/4</div> </div>	<div data-bbox="812 145 1038 369"> <div>4</div>  </div> <div data-bbox="812 369 1038 454"> <div>M10 x 50; DIN 912 SC.ST.10.050.01.912F.088</div> <div> 2/2</div> </div>	<div data-bbox="1038 145 1265 369"> <div>5</div>  </div> <div data-bbox="1038 369 1265 454"> <div>ø 10,5; DIN 125 US.ST.105.02.125</div> <div> 6/6</div> </div>	<div data-bbox="1265 145 1495 369"> <div>6</div>  </div> <div data-bbox="1265 369 1495 454"> <div>Ø 20 / ø 10,5 / h 22 DB.ST.0200.0105.0220.48</div> <div> 2/2</div> </div>
	<div data-bbox="148 454 359 689"> <div>7</div>  </div> <div data-bbox="148 689 359 779"> <div>Ø 20 / ø 10,5 / h 5 DB.ST.0200.0105.0050.48</div> <div> 6/6</div> </div>					
3	<div data-bbox="148 779 359 1014"> <div>8</div>  </div> <div data-bbox="148 1014 359 1104"> <div>KFT.06.020.001R.11</div> <div> 1/1</div> </div>	<div data-bbox="359 779 585 1014"> <div>9</div>  </div> <div data-bbox="359 1014 585 1104"> <div>KFT.06.020.001L.11</div> <div> 1/1</div> </div>	<div data-bbox="585 779 812 1014"> <div>10</div>  </div> <div data-bbox="585 1014 812 1104"> <div>M8 x 16; DIN 933 SC.ST.08.016.01.933.088</div> <div> 4/4</div> </div>	<div data-bbox="812 779 1038 1014"> <div>11</div>  </div> <div data-bbox="812 1014 1038 1104"> <div>ø 8,4; DIN 125 US.ST.084.02.125</div> <div> 4/4</div> </div>		
4	<div data-bbox="148 1104 359 1350"> <div>12</div>  </div> <div data-bbox="148 1350 359 1431"> <div>KFT.06.020.004.11</div> <div> 1/1</div> </div>	<div data-bbox="359 1104 585 1350"> <div>13</div>  </div> <div data-bbox="359 1350 585 1431"> <div>KFT.06.020.972.01.11</div> <div> 1/1</div> </div>	<div data-bbox="585 1104 812 1350"> <div>14</div>  </div> <div data-bbox="585 1350 812 1431"> <div>KFT.06.020.971.01.11</div> <div> 1/1</div> </div>	<div data-bbox="812 1104 1038 1350"> <div>15</div>  </div> <div data-bbox="812 1350 1038 1431"> <div>KFT.00.152.SV.8</div> <div> 1/1</div> </div>		

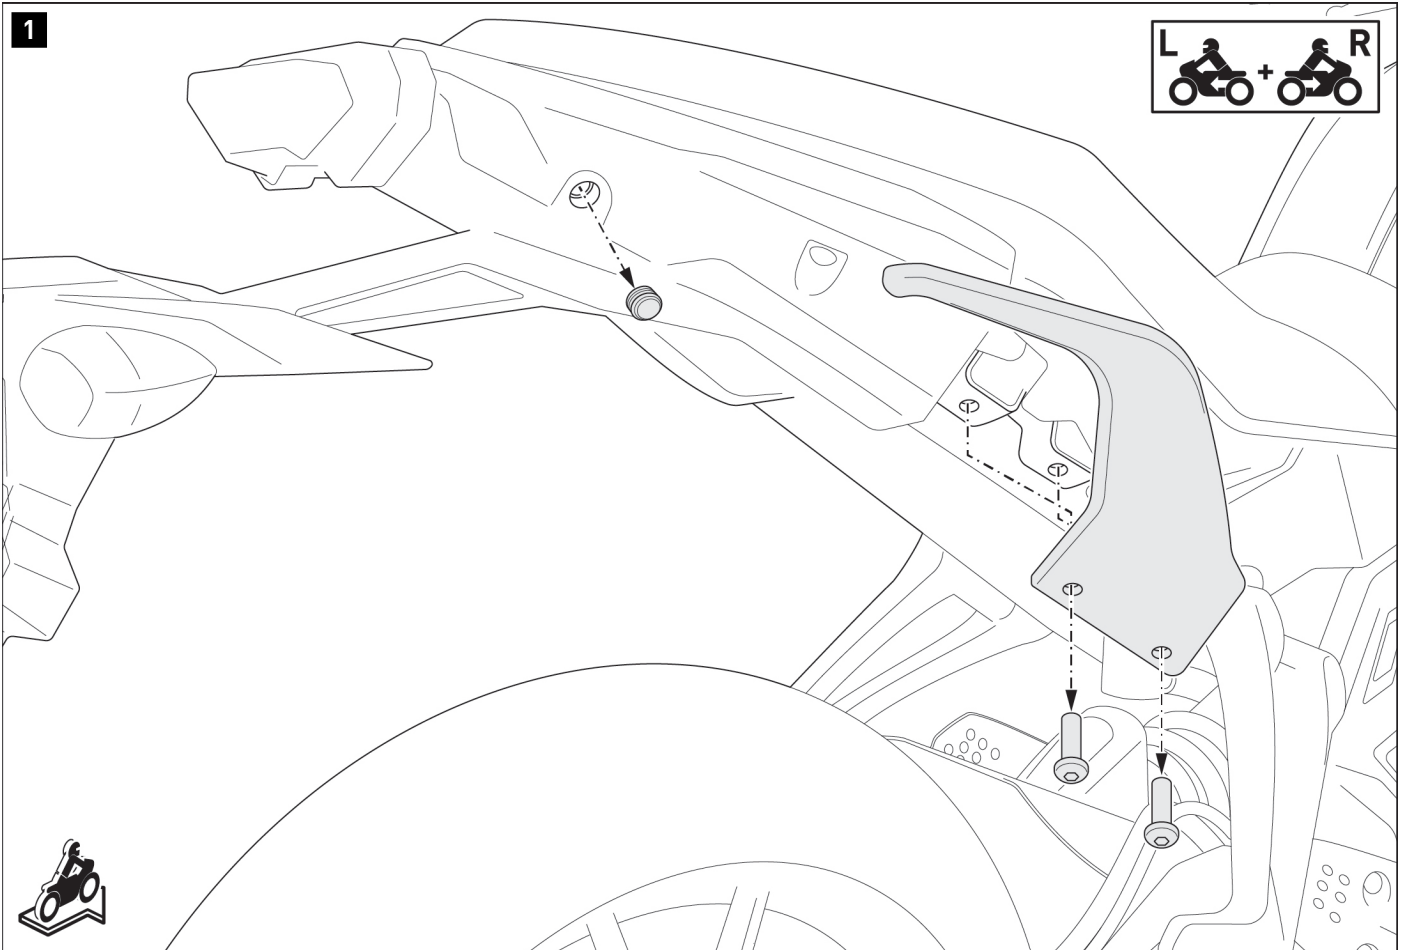


⚠ **WARNING:** Always wear eye and hand protection!  
 ⚠ **WARNING:** Always use suitable tools!

⚠ **NOTE:** Assembly is shown for the **right side**. Repeat the same steps using the corresponding parts on the **left** side of the vehicle as on the **right** side of the vehicle.

Remove the original plastic caps from **both sides** of the vehicle.  
 Remove the original screws from **both sides** of the attachment points.






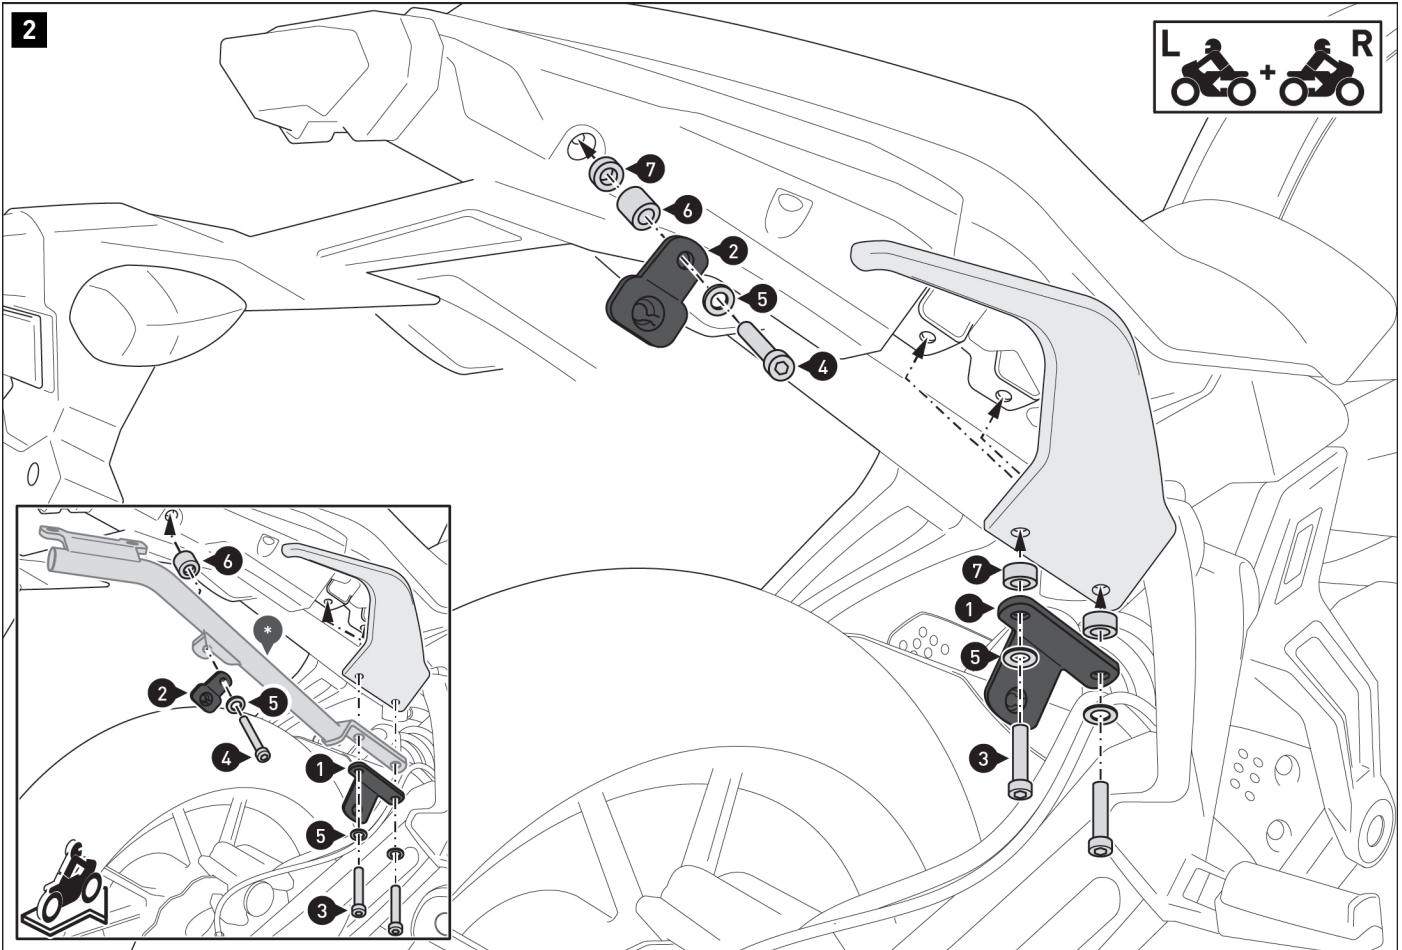


**NOTE:** The detailed drawing shows the installation of the side carrier with the SW-MOTECH luggage rack. Use the mounting parts included with the luggage rack (-) in combination with the mounting parts shown for the side carrier.

Screw mounting brackets (1) and (2) to **both sides** of the vehicle rear.




**WARNING:** Use liquid threadlocker!  
Do not tighten screws (3) and (4) yet.

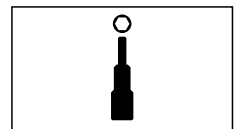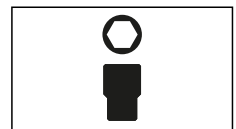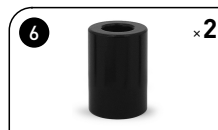


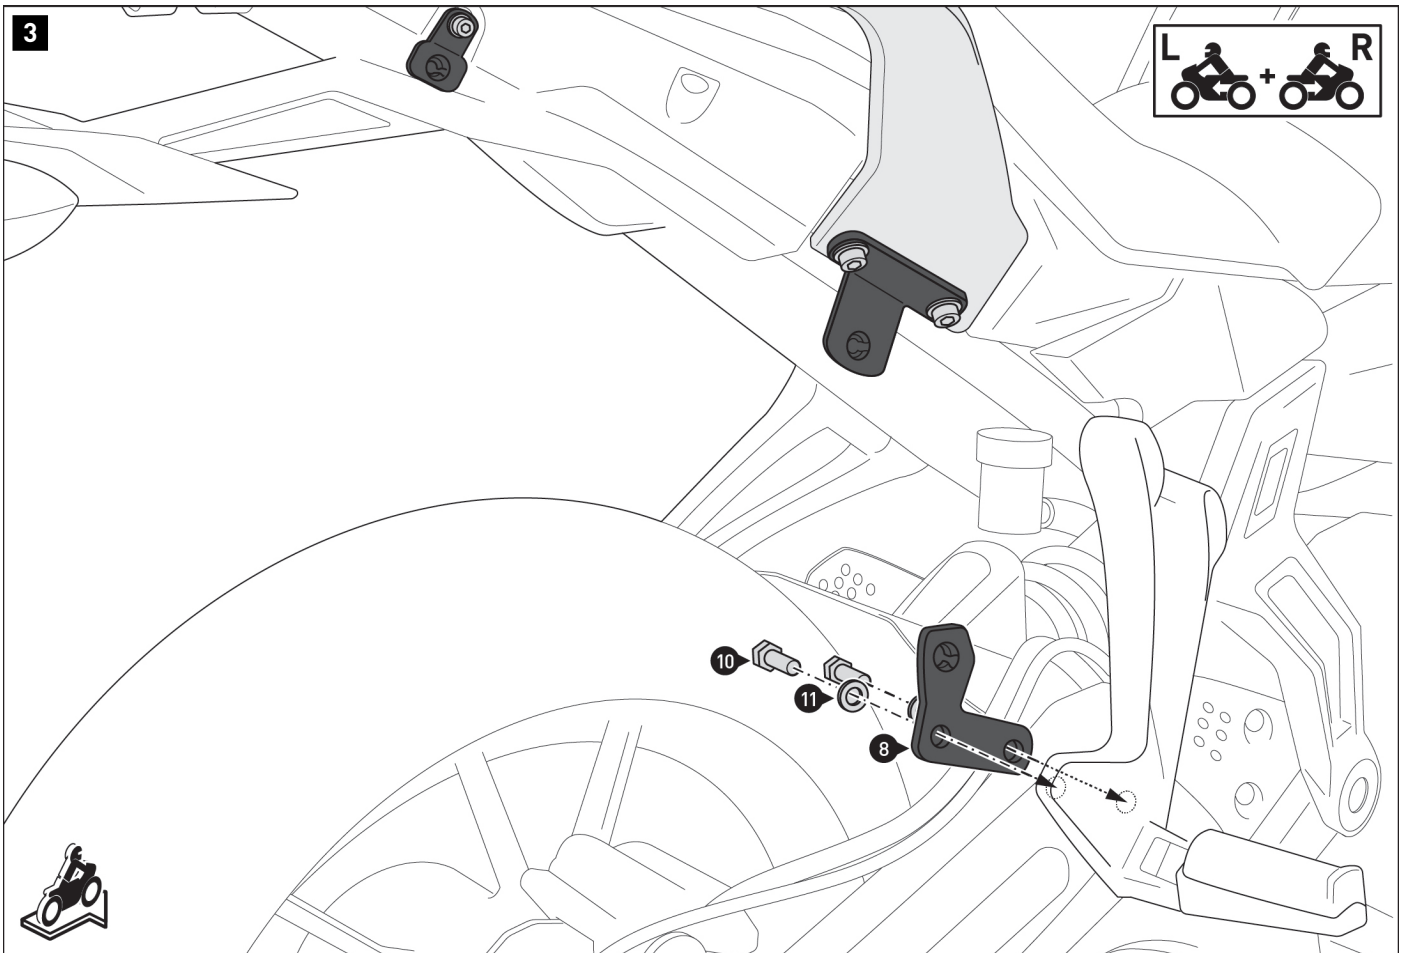

Screw the mounting brackets (8/9) to **both sides** of the vehicle behind the passenger footrest brackets.

**⚠ WARNING: Use liquid threadlocker!**  
Do not tighten the screws (10) yet.


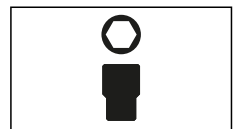
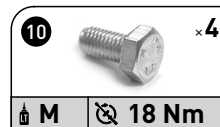
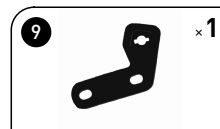


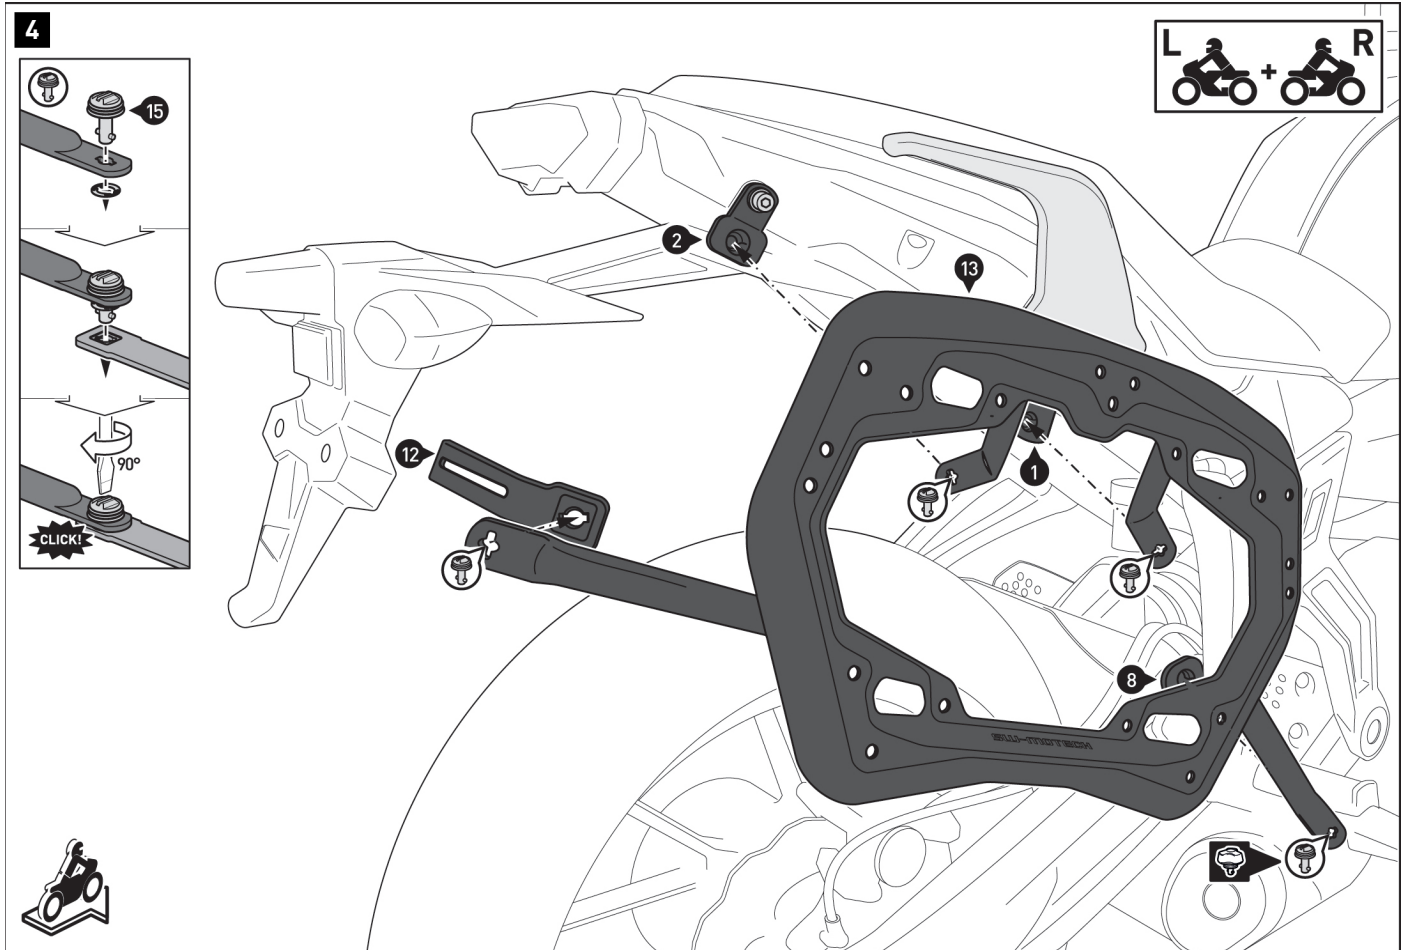

**⚠ NOTE:** SW-Motech anti-theft protection is sold separately. Mount the anti-theft protection on **both sides** of the vehicle as indicated.

Connect the side carriers (13/14) to mounting brackets (15), (1) and (2) as well as to the crossbar (8/9) using the quick-release fasteners (12). Secure the quick-release fasteners using the lock washers.

Once all components are loosely in place, tighten screws (3), (4) and (10) as specified in the mounting instructions.

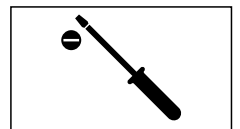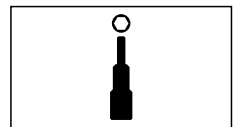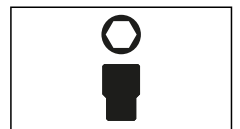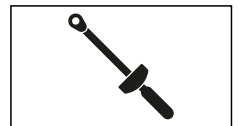

PRODUCT-SPECIFIC NOTES

**⚠ DANGER:** The specified maximum load includes the weight of the suitcase/luggage and adapter kit. The maximum load of the vehicle specified by the vehicle manufacturer applies.

 ≤ 10 kg (≤ 22 lbs)	 ≤ 130 km/h (≤ 80 mph)
--	---

**⚠ NOTE:** The side carriers were designed exclusively for use with SW-MOTECH adapter kits.

**⚠ NOTE:** Remove the side carriers when riding without luggage. Always use the side carriers in pairs.

**⚠ WARNING:** Make sure that the cases are NOT in the exhaust gas stream after mounting them on the vehicle. Risk of burns!

**⚠ NOTE:** Observe all country-specific regulations for the registration and operation of your vehicle as well as any applicable TÜV regulations. Have any parts requiring registration entered into your vehicle documents by your local inspection authority after they have been installed.